

## Controlling the Display of Railings on Deck Stairs

By default, deck stairs have a railing on both sides. You can choose to have a railing on the left side only or right side only, or remove them altogether.

### To control the display of railings on deck stairs:

1. Click on the staircase to select it.
2. Right-click and select **Properties**, or select **Edit | Modify Elements | Properties**.
3. In the *Railings* area, uncheck the **Include Railings** check box if you don't want any railings on your deck stairs. If you want one or more railings on the stairs, leave this check box enabled.
4. If you want a railing on the left side of the stairs, select **Railing on left side** from the drop box. If you want a railing on the right side of the stairs, select **Railing on right side** from the drop box. If you want a railing on both sides of the stairs, select **Railing on both sides**.
5. Click **OK**.

**Note:** If after going thru the steps above the railings on deck stairs do not appear make sure that the your deck has a railing type chosen. Your deck stairs will pick up the railing type from your deck's railing properties.