

Raising or Lowering a Floor

You can raise or lower a floor using the Elevate tool.

To raise or lower a floor:

Select the floor. If the floor was created automatically with your wall layout, you need to select the floor in 3D.

Right-click and select **Elevate**, or select **Edit|Modify Elements|Elevate**.

In the Elevate dialog, specify the desired elevation of the floor above the floor level defined for the current building location. Using a negative number will lower the floor below the current building level. (location)

Click **OK**.